


Installation instruction and parts list 02

Machine

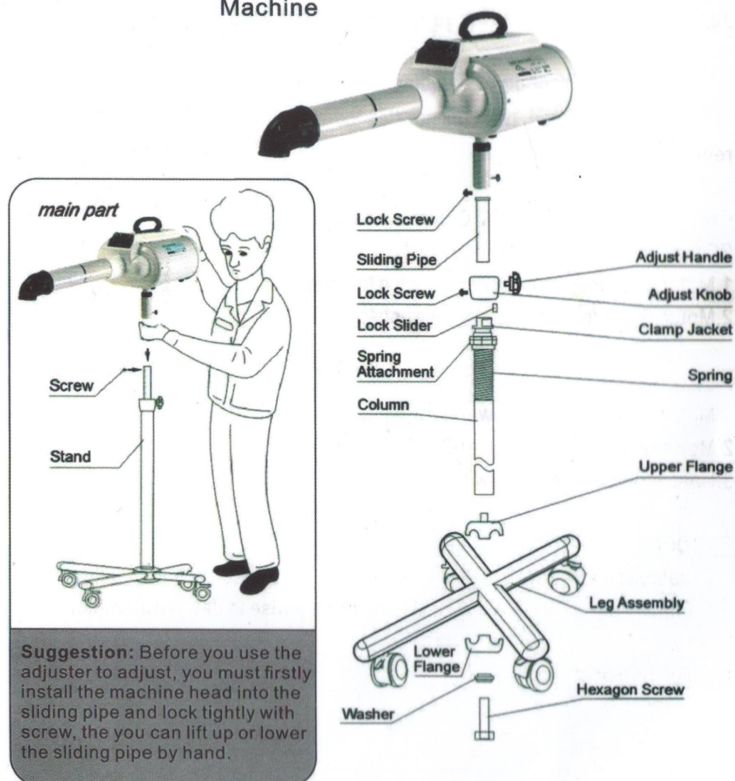

DUAL-MOTOR PET DRYER

PET-007 Series

INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTION AND SAFETY
PRECAUTIONS BEFORE OPERATING PRODUCT!
SAVE FOR FUTURE REFERENCE, WARRANTY PERTINENT CONTENT.**

Congratulations!

You've just purchased a wonderful dual motor pet dryer which produces warm, high velocity air under pressure to make your animal grooming tasks easier. Your new dryer is designed to provide long, reliable service.

Please read this manual carefully and completely before beginning operation of your dryer and keep this manual in a convenient and safe place for future reference.

Your dryer has a 12 months warranty covering the unit against defects in materials and workmanship. Regular maintenance items such as brushes and filters are not included (see warranty card for complete warranty information). It is also important to retain your sales receipt as proof of purchase should service ever be needed.

Your dryer has two brush-type motors. It is important that the brushes be changed when they become worn down to prevent damage to your dryer motor (brushes are maintenance components and are not covered under the warranty). We suggest checking the motors brushes after every 1000 hours of dryer use. Please see section on BRUSHES in this manual for instructions.

A NOTE ABOUT HEAT OF MODEL PET-007: PET-007 has no heating element. The PET-007 produces heat by a "flow-thru" motors system, meaning the air is pushed through the motors and is warmed by the natural heat of the motors that occurs during operation. This means greater electrical savings and efficiency for you. The dryer will reach its maximum air temperature after about 2-4 minutes of operation. (Note: The higher the room temperature, the warmer the air from the dryer will be.)

ASSEMBLY

To attach hose to dryer: Your dryer hose has a black hose adapter that will screw onto the hose in a counter-clockwise motion. The adapter with hose attached then fits onto the dryer with a half-twist motion that locks the adapter onto the dryer.

To remove hose from adapter: Turn the hose clockwise.

ATTACHMENTS: Your dryer is equipped with one hose and 3 twist-on nozzles. To attach nozzles to hose, twist the nozzles "counter-clockwise". Twist clockwise to remove.

OPERATION - Switches and Controls:

PET-007

- 1.Motor -1---turn on the power-1 switch to choose I or II
- 2.Motor -2---turn on the power-2 switch to choose I or II

PET-007H

- 1.Motor -1---turn on the power-1 switch to choose I or II
- 2.Motor -2---turn on the power-2 switch to choose I or II
- 3.Heat--- turn on the heat switch

PET-007-1

- 1.Variable speed: - Turn the dial speed control clockwise to desired air output.
2. Variable heat: - Turn the dial heat control clockwise to desired air output.
3. Power - Turn on the power switch
- 4.Ionic- Turn on the ion switch

IMPORTANT SAFEGUARDS

WARNING: IMPORTANT SAFETY PRECAUTIONS!! PLEASE READ COMPLETELY BEFORE USING PRODUCT!!

When using electrical appliances, especially when children or animals are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including but not limited to the following: DO NOT TURN ON DRYER WITHOUT FIRST HOLDING THE DRYER HOSE, as the air volume from the dryer can cause the hose to whip or move rapidly and may cause injury.

1. Do not leave dryer OR the animal unattended while product is in use.
2. Unplug unit when not in use.
3. Do not use extension cords with dryer.
4. Do not unplug unit by pulling on cord.
5. Do not expose dryer to rain or water.
6. Do not use or store dryer where it can fall or be pulled into tub or sink or standing water. If dryer falls into water . . . UNPLUG IT . . . Do not reach into the water!
7. Unplug unit before attempting any maintenance or service.
8. Do not put any object into dryer openings.
9. Keep loose clothing, jewelry and hair away from dryer openings.
10. Do not direct dryer air towards eyes or ears of people or pets.
11. Never use dryer if it has a damaged cord or plug, has been dropped, damaged or exposed to rain or water. Return to suppliers or an Authorized Service Center for service.
12. This dryer should not be used as a cage dryer.
13. This product is for use on animals only.
14. Recommended operation by adults only. Use caution when working around children.
15. Do not use attachments not recommended by suppliers.

16. Do not operate without filters in place. Keep filters clean, as dirty filters limit air intake and may damage the motor or cause overheating.
17. Plug only into a properly grounded receptacle. Always make sure the amperage of the electrical outlet is sufficient for the amperage rating of the product. (See Product Specifications for amperage rating of this product).
18. Do not use product for anything other than its intended purpose.
19. Do not attempt to perform any service or maintenance not outlined in instruction manual.
20. Do not attempt any product modifications or alterations. Do not use, if any parts or switches are damaged. Send to an Authorized Service Center or suppliers for service.

REQUIRED MAINTENANCE

FILTERS:

(Procedures below must be performed regularly or as needed to protect dryer warranty status.)

FILTER CLEANING: the internal filter of the dryer should be kept clean. If the filters become heavily coated with hair and/or dirt, it will reduce the air output of your dryer and can cause damage to the motors or cause the motors to overheat.

***Never operate the dryer without all filters in place.**

To clean external filter: Vacuum or shake off dirt and hair daily. Filter may be rinsed in water if necessary. Let filter dry completely before reinstalling on dryer.

To clean the internal motor filter:

1. Unplug dryer.
2. Slide off the back cover of the dryer. This is a compression fit and will come off with a little effort.
3. Remove the filter from the internal filter housing.

4. Clean motor filter disk by vacuuming off hair and dirt, or wash filter gently in cool water. Shake off excess water and allow to air dry completely. (Replace filter if necessary)
5. Place the filter back in the filter housing.
6. Replace dryer back cover.

Any maintenance not explained in this manual should be performed by suppliers or an Authorized Service Center. All warranty service must be performed by an Authorized Service Center to protect your warranty status.

Attachment List :

Flexible high-pressure hose X1
 Air Sweep Nozzle X1
 Nozzle - Super Hi-Velocity X1
 Hi-Velocity Nozzle X1

BRUSHES:

Your dual motor dryer has two brush-type motors. The brushes should be checked for wear after approximately 1200 hours of use. If the carbon brushes are worn shorter than 1/4 inch, the brushes should be replaced. Do not use, Send to an Authorized Service Center or suppliers for service.

Products Specifications:

MODEL	PET-007	PET-007H	PET-007-1	007 Series
Feature	2 steps of each motor no heat	2 steps of each motor 2 steps heat	variable speed variable heat	
Voltage	230VAC			115VAC
Amperage	10. 4A	13. 9A		16. 3A
Hertz	50/60			60
Wattage	2400W	3400W		1875W

Installation instruction and parts list 01

